 


# Tumble and Spin Laundry Set™

 
Washer and Dryer Instructions




**our** generation.  
this is **OUR** story®

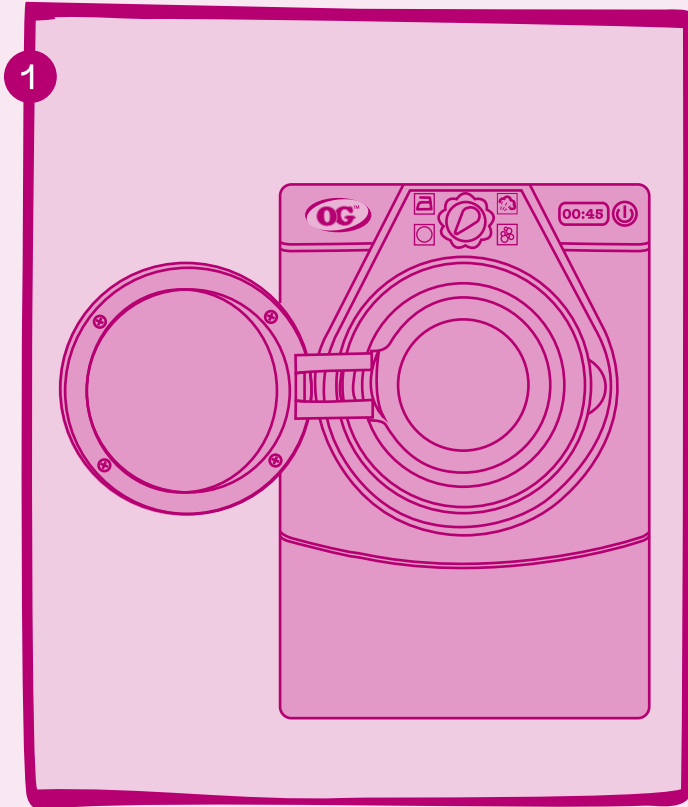

1 Open the door to put clothes inside. Close the door once this is done. (The washer & dryer will stop automatically when door is opened.)

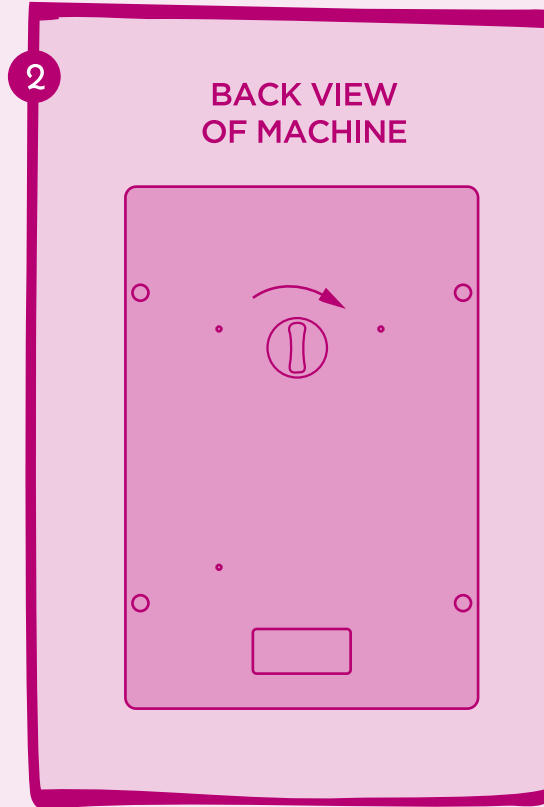

 2 Before play, turn the knob clockwise to wind-up the machine.

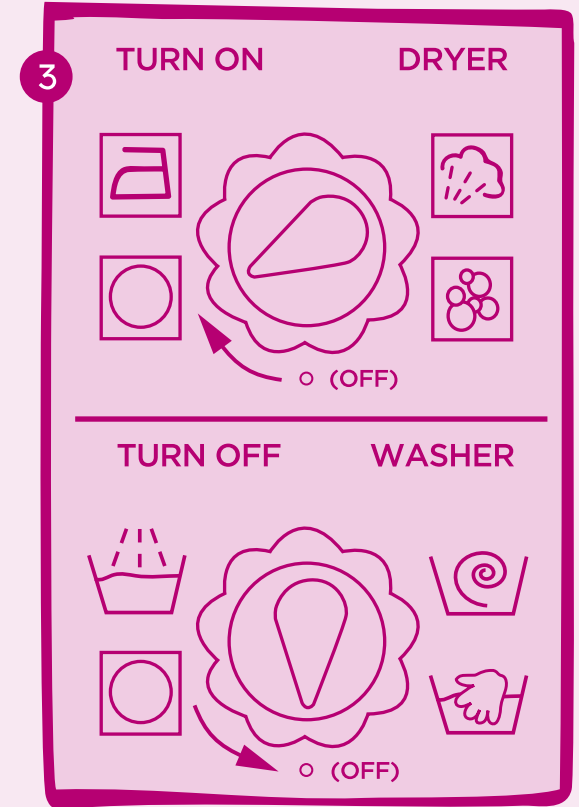

3 Turn front knob to  to start machine. Point the knob downwards to stop the machine.



age  
3+

BD37158A

 **WARNING:**  
**CHOKING HAZARD** - Small parts.  
Not for children under 3 years.